

 


IMPORTANT AND MANDATORY:

At EVERY BATTERY change:


CLEAN carefully **O-RING**, its **SEAT** and **CAP SEAT**.

Dust or salt residues may cause **FLOODING**.

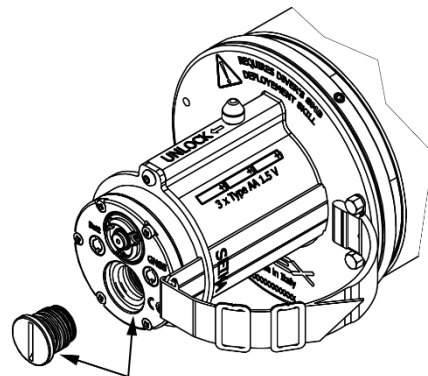


After EVERY use:

 IMMERSE in FRESH WATER (at least 15 minutes).

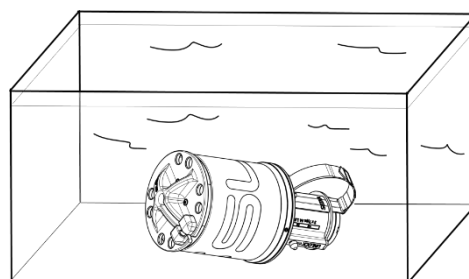

At least EVERY 5 uses:

 Perform **CABLE RELAXATION** manouvre (see User manual).

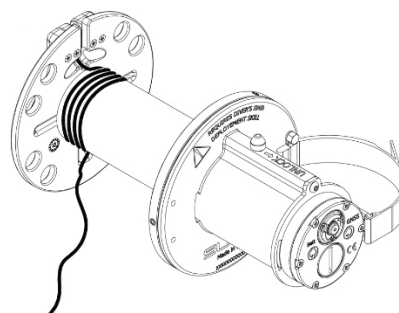

At the time this manual has been issued the **ERON D-1 firmware version is the 6.4**.

Older ERON D-1 FW versions are not compatible with SEIKA.

 


IMPORTANTE ED OBBLIGATORIO:

Ad OGNI cambio BATTERIE:


PULIRE accuratamente **O-RING**, sua **SEDE** e **SEDE TAPPO**.

Residui di polvere o sale potrebbero causare ALLAGAMENTO.

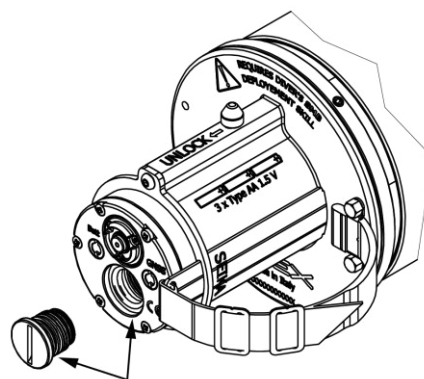


Dopo OGNI utilizzo:

 IMMERGERE in ACQUA DOLCE (15 minuti almeno).

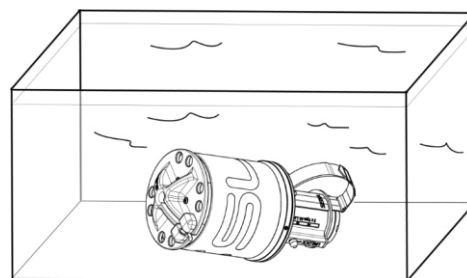

Almeno OGNI 5 utilizzi:

 effettuare manovra di **DISTENSIONE CAVO** (vedi Manuale d'uso).

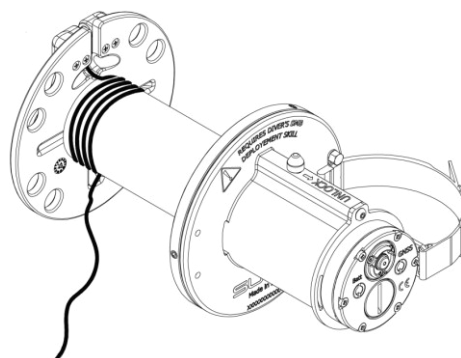

AVVERTENZA

Al momento in cui questo manuale è stato pubblicato, la versione del **firmware ERON D-1 è 6.4**.

Le versioni precedenti del FW ERON D-1 NON sono compatibili con SEIKA.